
1) Please make sure the breather cap is installed on the top of the pump head. (Hand Tight)




2) Fully insert nylon tube into the manifold. Make sure it is fully inserted, then compress the nut onto the nylon. Leaving the remainder of tubing at the pump (do not cut) this helps with any vibration.

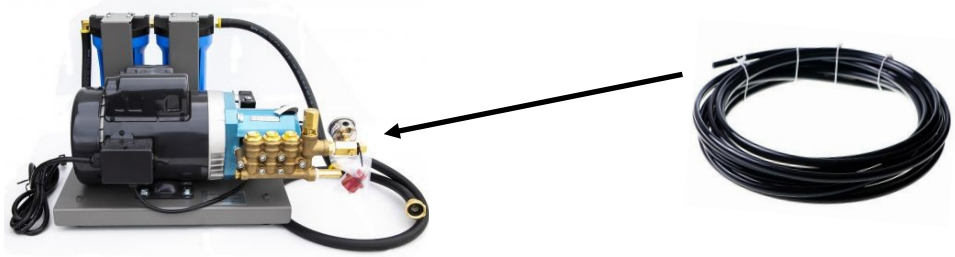

3) Run the nylon to the vertical blank mist section. Or continue using the nylon to the application.

Recommendations:

- Must prime system before running.
- Space clips about 24”-20”. According to line spacing.
- Leave all remaining nylon with the pump.
- Install mist line on the lowest outer edge.

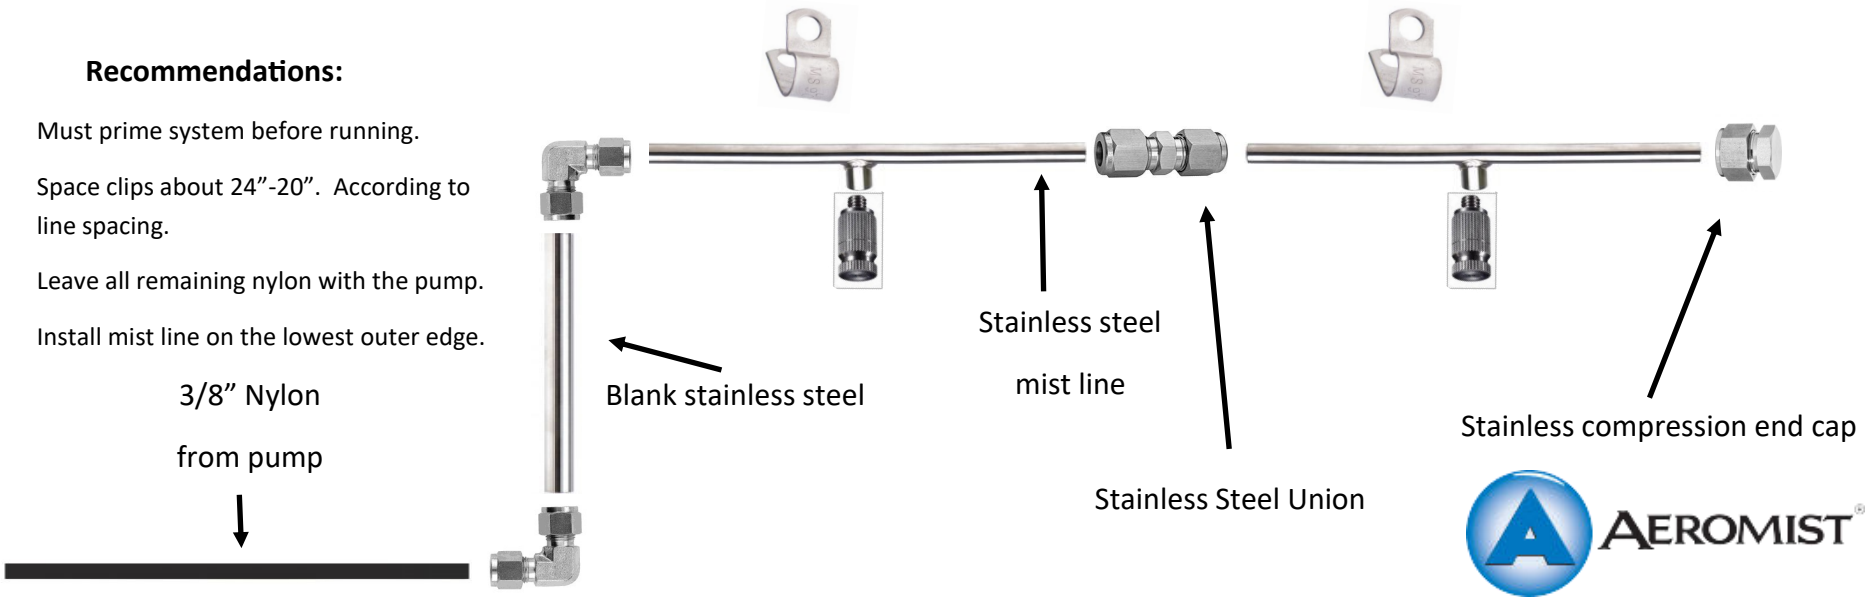

AEROMIST®